

FordMobileConnectivity
Getting Started

Feel the difference



**Ford and your mobile phone.
A clever connection.**

www.ford-mobile-connectivity.com

Sound&Connect

Would you like to use your mobile phone in your Ford? Or listen to music on your iPod, USB stick or mobile phone? Operate everything using voice commands? No problem with your new Ford. This Getting Started guide explains how to use this system.

1. Phoning via Bluetooth



2. USB/iPod use



3. Voice control



To find out which mobile phones, USB devices and Apple products can be connected to the system and to access other information (frequently asked questions, step-by-step video instructions) on your Ford audio system, go to: www.ford-mobile-connectivity.com





How to connect your mobile phone with your Ford via Bluetooth

Before you can use your phone in your Ford, you have to create a Bluetooth connection. First familiarise yourself with your mobile phone's Bluetooth functions (see the user manual for your phone) and then proceed as follows:

1. Switch on your phone's Bluetooth function.
2. In the Bluetooth menu on your phone, search for "Ford Audio" and then select it.
3. A personal PIN will now appear on the radio display. Enter this PIN in your mobile phone.
If no PIN appears on the radio display, enter "0000" in your mobile phone and then the PIN that appears on the radio display.
4. If your phone asks if you would like this connection to be automatic in future, confirm with "Yes".
5. Now your phone is active and you can use the handsfree functions.

Helpful step-by-step video instructions can be found on www.ford-mobile-connectivity.com

Tips:

If you authorise the Bluetooth connection to Ford Audio, your phone will automatically connect when the vehicle is started (see the user manual for your phone).

If the Bluetooth connection is unstable, it may help to restart your mobile occasionally.

You can register up to six mobile phones in the system, but only one can be the active phone you use to make or take calls.

You have several options for making a phone call using your Ford audio system, which are described in the following section.



Phoning safely in your Ford

1. Dialling by entering numbers on the radio keypad

You can enter the desired number manually. Press the “Phone” button on your radio keypad and enter the desired number. Then press the Green Receiver button (“Dial”). The system will connect you. You can end the call by pressing the Red Receiver button (“End”). Some radio models do not offer this function.

2. Dialling via voice command

Your Ford audio system can connect your call via voice command.

	Your action:	The system replies:
Step 1	Press the VOICE button (MODE button)	“Beep”
Step 2	Say “Phone”	“Phone”
Step 3	Say “Dial number”	“Number please”
Step 4	Enter the desired phone number as described below	With the phone number and adds “Continue”
Step 5	Continue entering the number or say “Dial”	Dialling

Say the phone number in blocks of digits or as an uninterrupted sequence of digits. The system will repeat the digits as a block. Please do not use any filler words.

Tip:

You can say the voice command “Dial” right after saying the full number.

To simplify dialling, you can use voice commands to save up to twenty phone numbers under their corresponding names and then call them up via the “Name directory”. For more details, please see your Ford driver’s manual.

3. Dialling a number in your phonebook using the radio system

The Ford audio system uses the personal phonebook stored in your mobile phone (provided the phone supports this function). Only the contacts saved to your phone memory are displayed and transferred to the vehicle. To make use of your personal phonebook entries, press the “Phone” button on your radio. Look in the “Phonebook” menu to select the entry you want and then press the Green Receiver button to connect (“Dial”).

4. Dialling a number from your calls list using the radio system

Another way to make a call is to use your mobile phone’s calls list (provided your phone supports this function). Press the “Phone” button and choose from the menu either *Missed Calls*, *Received Calls* or *Dialled Numbers*. Select the number you want from the phone numbers stored there and press the Green Receiver button to connect (“Dial”).

5. Taking calls

You can take incoming calls with the Green Receiver button (“Accept”) or the “Phone” button.



Enjoying mobile music in your Ford*

You can connect a number of different mobile music sources to your Ford audio system and listen to the music of your choice in high quality stereo sound.

Information on the compatibility of music players and how to connect them can be found in step-by-step video instructions on: www.ford-mobile-connectivity.com

Depending on the audio system, you can choose from the following music sources:

USB storage media

Just insert e.g. a USB stick in the USB port and choose it as playback source on your audio system's menu. You will see the file structure of your USB stick on the display. Supported audio formats: MP3, WMA** and WAV.

Apple iPod/iPhone

You can operate your iPod or iPhone very easily just like you usually do using the Ford audio system. For the best operating comfort and optimal sound quality, we advise using the original Apple USB cable.

Bluetooth music source, for example Smart Phones

Via the Bluetooth connection you can play music tracks stored on your mobile phone in stereo.

How to activate the music source of your choice

Connect the music player you want to use to your Ford audio system. Select the desired source (USB, iPod or Bluetooth) by pressing the "AUX" button repeatedly until you see it displayed, or via voice command. The device you selected will automatically begin playback.

Tip:

You can also use the USB port to charge your mobile device.

*Mobile music functions are only available with the "USB/iPod" equipment package. In this case your car will be equipped with a USB port, which is located, depending on car model, either in the glove compartment, the centre console or the armrest compartment.

**DRM-protected WMA files will not play.





The Ford voice control system – safety and convenience

Voice commands allow you to operate both your Ford audio system and your mobile phone. You can control several functions using a defined dialogue with fixed voice commands.

The dialogue is set up according to a simple scheme: the system confirms each voice command by repeating it. The microphone is directed toward the driver's seat. Speak the command clearly and at an appropriate volume.



Voice control is this easy

To experience how easy it is to use voice control, try out the system using the following example:

Activate the voice control system by pressing the VOICE button (MODE button)*, wait till you hear the beep and then say the command. You can interrupt the activated command at any time by pressing the VOICE button (MODE button) again.


For example, it just takes a few simple steps to tune in the radio station of your choice:

	Your action:	The system replies:
Step 1	Press VOICE button (MODE button)	"Beep"
Step 2	You say "Radio"	"Radio"
Step 3	You say "FM"	"FM, frequency please"
Step 4	You say e.g. "102.4"	"Tune 102.4"

As you can see, a dialogue consists of just a few easy steps. Press the VOICE button (MODE button), choose a device, select a function and indicate the value/name.

Please keep in mind that background noise in the vehicle (e.g. an open window or passengers talking) can interfere with the voice control system. Please use only the predefined commands (see Commands List).

*The VOICE button (MODE button) is located either on the audio remote control on the steering wheel or on the turn signal lever.

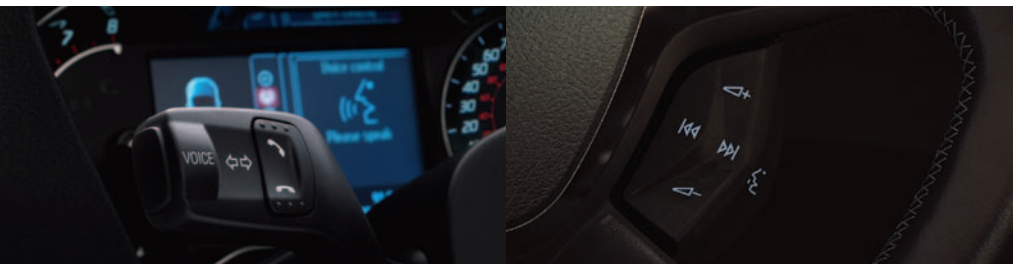



Useful voice commands

Help

When you don't know what to do, you can use the voice command "Help" at any time to hear the possible commands available.

Direct commands

To shorten the dialogue, you can use the following direct voice commands, among others, after pressing the VOICE button (MODE button):

"Dial number"	"Temperature"	"Track" (with active source CD, USB, iPod)
"Dial name"	"Auto mode"	"Playmode" (for shuffle and repeat of music files)
"Redial"	"Defrosting on"	"Cancel"
"Store name"	"Demisting on"	
"Delete name"	"Defrosting off"	
"Play directory"	"Demisting off"	
"Delete directory"	"Tune name"	

Cancel

Use the command "Cancel" or press the VOICE button (MODE button) to end the dialogue at any time. By pressing the VOICE button (MODE button) again, you can start up a new voice dialogue.










Correction

When entering a phone number, use the command "Correction" to delete the last block of digits you entered. The system will repeat the blocks it has understood up till then. Then you can continue your entry at that point.

Please familiarize yourself further with your voice control system. After just a few steps you will discover how much fun it can be! For more details on voice control, see your Ford driver's manual.
















An overview of all speech commands: “Phone“

FUNCTIONS		ACTION	SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep“			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
Help function Here, you can listen to a list of important commands at any time.		VOICE BUTTON/“BEEP“	“PHONE“	“PHONE“	“HELP“	“(list of possible speech commands)“				
Dial name(s) You can phone a saved name abbreviation.			“PHONE“	“PHONE“	“DIAL NAME“	“DIAL NAME, NAME PLEASE“	“(Name)“	“DIAL (Name). CONFIRM YES OR NO“	“YES“ or “NO“	“DIALING“ or “COMMAND CANCELLED“
Dial number You can use this speech command to select a phone number.			“PHONE“	“PHONE“	“DIAL NUMBER“	“DIAL NUMBER, NUMBER PLEASE“	“(phone number)“	“(phone number) PROCEED?“	“DIAL“ or “CORRECTION“	“DIALING“ or “(repeat last part of number) PROCEED“
Redial This function lets you redial the last number you called.			“PHONE“	“PHONE“	“REDIAL“	“REDIAL. CONFIRM YES OR NO“	“YES“ or “NO“	“DIALING“ or “COMMAND CANCELLED“		
Mobile name Use this function to access numbers saved in your mobile under an abbreviation.			“PHONE“	“PHONE“	“MOBILE NAME“	“MOBILE NAME“ (phone-dependent dialogue)				
Reject call Automatic call rejection can be activated using voice control. This command stops incoming calls from being put through.			“PHONE“	“PHONE“	“REJECT CALLS“	“REJECT CALLS“				
Accept calls Automatic call rejection can be deactivated using voice control. This command lets incoming calls come through again.			“PHONE“	“PHONE“	“ACCEPT CALLS“	“ACCEPT CALLS“				

Tip: You can also issue voice commands for phone functions without saying “Phone“ first.












An overview of all speech commands: "Phone"

FUNCTIONS		ACTION	SPEECH DIALOGUE												
For each command, press the VOICE button and wait for the system answer "beep"			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	
Store name Use this function to store new name abbreviations.		VOICE BUTTON/"BEEP"	"PHONE"	"PHONE"	"STORE NAME"	"STORE NAME, NAME PLEASE"	"(Name)"	"PLEASE REPEAT NAME"	"(Name)"	"STORE NAME (Name), "NAME STORED, NUMBER PLEASE?"	"(phone number)"	"(phone number)"	"STORE"	"STORE NUMBER (phone number)", "NUMBER STORED"	
Delete name Saved name abbreviations can be deleted from the directory.			"PHONE"	"PHONE"	"DELETE NAME"	"NAME PLEASE"	"(Name)"	"DELETE (Name). CONFIRM YES OR NO"	"YES" or "NO"	"(Name) DELETED" or "COMMAND CANCELLED"					
Play directory This function repeats all the entries saved in the system.			"PHONE"	"PHONE"	"PLAY DIRECTORY"	"PLAY DIRECTORY (repeat saved names)"									
Delete directory This function deletes all the saved name abbreviations from the directory.			"PHONE"	"PHONE"	"DELETE DIRECTORY"	"DELETE DIRECTORY. CONFIRM YES OR NO"	"YES" or "NO"	"DIRECTORY DELETED" or "COMMAND CANCELLED"							

Tip: You can also issue voice commands for phone functions without saying "Phone" first.












An overview of all speech commands: “Radio“

FUNCTIONS		ACTION	SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep“			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
Help function Here, you can listen to a list of important commands at any time.		VOICE BUTTON/“BEEP“	“RADIO“	“RADIO“	“HELP“	“(list of possible speech commands)“				
Radio playback Use this function to switch between audio source and radio mode.			“RADIO“	“RADIO“	“PLAY“					
Tune frequency Use this function to tune the frequency via speech commands.			“RADIO“	“RADIO“	“FM“ or “MEDIUM-WAVE“ or “LONGWAVE“	“FM FREQUENCY PLEASE“	You name the desired frequency, e.g. “99.2“	“STATION 99.2“		
Store name After tuning in to a frequency, you can save it in the directory with a name.			“RADIO“	“RADIO“	“STORE NAME“	“STORE NAME, NAME PLEASE“	You give the desired name, e.g. “WDR 2“	“PLEASE REPEAT NAME“	You repeat the name, e.g. “WDR 2“	“STORE NAME WDR 2“
Station name Use this function to call up a saved radio station.			“RADIO“	“RADIO“	“STATION NAME“ ¹	“NAME PLEASE“	Give the desired station name, e.g. “WDR 2“	“STATION WDR 2“		
Delete name Use this function to delete a saved radio station.			“RADIO“	“RADIO“	“DELETE NAME“	“NAME PLEASE“	You give the name you want to delete, e.g. “WDR 2“	“DELETE WDR 2?“	“YES“ or “NO“	“WDR 2 DELETED“ or “COMMAND CANCELLED“
Play directory Use this function to hear a list of all radio stations stored in the system.			“RADIO“	“RADIO“	“PLAY DIRECTORY“	“PLAY DIRECTORY (repeat saved names)“				
Delete directory Use this function to delete all saved radio stations at the same time			“RADIO“	“RADIO“	“DELETE DIRECTORY“	“DELETE DIRECTORY?“ “CONFIRM YES OR NO“	“YES“ or “NO“	“DIRECTORY DELETED“ or “COMMAND CANCELLED“		

¹ Can be used as a direct command.



An overview of all speech commands: “CD player“










FUNCTIONS		ACTION	SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep“			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
Help function Here, you can listen to a list of important commands at any time.		“CD PLAYER“	“CD PLAYER“	“HELP“	“(list of possible speech commands)“					
CD playback Use this command to activate the CD player.		“CD PLAYER“	“CD PLAYER“	“PLAY“						
Track Use this command for direct selection of individual CD tracks.		“CD PLAYER“	“CD PLAYER“	“TRACK“ ¹	“TRACK NUMBER PLEASE“	“(Integer 1 to 99)“ ²	“TRACK (number)“			
Repeat track Use this command to repeat a played track.		“CD PLAYER“	“CD PLAYER“	“REPEAT TRACK“						
Repeat folder Use this command to repeat a folder.		“CD PLAYER“	“CD PLAYER“	“REPEAT FOLDER“						
Repeat off Use this command to deactivate the repeat function.		“CD PLAYER“	“CD PLAYER“	“REPEAT OFF“						
Shuffle all Use this command to activate shuffle.		“CD PLAYER“	“CD PLAYER“	“SHUFFLE ALL“						
Shuffle folder Use this command to activate shuffle for a folder.		“CD PLAYER“	“CD PLAYER“	“SHUFFLE FOLDER“						
Shuffle off Use this command to deactivate shuffle.		“CD PLAYER“	“CD PLAYER“	“SHUFFLE OFF“						

¹ Can be used as a direct command.

² Or an integer of 100 to 65535 in single figures (e.g. “3“, “4“, “5“ for track 345).



An overview of all speech commands: “CD changer“










FUNCTIONS		ACTION	SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep“			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
Help function Here, you can listen to a list of important commands at any time.		“CD CHANGER“	“CD CHANGER“	“HELP“	“(list of possible speech commands)“					
CD playback Use this command to activate the CD changer.		“CD CHANGER“	“CD CHANGER“	“PLAY“						
Disc Use this command for direct selection of a disc from the CD changer.		“CD CHANGER“	“CD CHANGER“	“DISC“	“DISC NUMBER PLEASE“	“(Integer 1 to 6)“	“DISC (number)“			
Track Use this command for direct selection of individual CD tracks.		“CD CHANGER“	“CD CHANGER“	“TRACK“ ¹	“TRACK NUMBER PLEASE“	“(Integer 1 to 99)“ ²	“TRACK (number)“			
Repeat CD Use this command to repeat a played CD.		“CD CHANGER“	“CD CHANGER“	“REPEAT CD“						
Repeat track Use this command to repeat a played track.		“CD CHANGER“	“CD CHANGER“	“REPEAT TRACK“						
Repeat folder Use this command to repeat a folder.		“CD CHANGER“	“CD CHANGER“	“REPEAT FOLDER“						
Repeat off Use this command to deactivate the repeat function.		“CD CHANGER“	“CD CHANGER“	“REPEAT OFF“						
Shuffle all Use this command to activate shuffle.		“CD CHANGER“	“CD CHANGER“	“SHUFFLE ALL“						

¹ Can be used as a direct command.

² Or an integer of 100 to 65535 in single figures (e.g. “3“, “4“, “5“ for track 345).












An overview of all speech commands: “CD changer“

FUNCTIONS		SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep“ 	ACTION	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
	VOICE BUTTON/“BEEP“								
Shuffle CD Use this command to activate shuffle for a CD.		“CD CHANGER“	“CD CHANGER“	“SHUFFLE CD“					
Shuffle folder Use this command to activate shuffle for a folder on the CD.		“CD CHANGER“	“CD CHANGER“	“SHUFFLE FOLDER“					
Shuffle off Use this command to deactivate shuffle.		“CD CHANGER“	“CD CHANGER“	“SHUFFLE OFF“					



An overview of all speech commands: “External device (USB)“

FUNCTIONS		ACTION	SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep“			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
USB help function Here, you can listen to a list of important commands at any time.		VOICE BUTTON/“BEEP“	“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“HELP“	“(list of possible speech commands)“		
USB playback Use this command to select the USB device as an active audio source and start playback.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“PLAY“			
USB track Use this command for direct selection of individual tracks on the USB device.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“TRACK“ ¹	“TRACK NUMBER PLEASE“	“(Integer 1 to 99)“ ²	“TRACK (number)“
USB playlist³ Use this command for direct selection of playlists from the USB device.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“PLAY LIST“	“PLAYLIST NUMBER PLEASE“	“(Integer 1 to 10)“	“PLAYLIST (number)“
Folder⁴ Use this command to select individual folders/directories with music data on your USB device.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“FOLDER“	“FOLDER NUMBER PLEASE“	“(Integer 1 to 10)“	“FOLDER (number)“
Repeat track Use this command to repeat a played track.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“REPEAT TRACK“			
Repeat folder Use this command to repeat a folder.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“REPEAT FOLDER“			
Repeat off Use this command to deactivate the repeat function.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“REPEAT OFF“			
Shuffle all Use this command to activate shuffle.			“EXTERNAL DEVICE“	“EXTERNAL DEVICE“	“USB“	“USB“	“SHUFFLE ALL“			

¹ Can be used as a direct command.

² Or an integer of 100 to 65535 in single figures (e.g. “3“, “4“, “5“ for track 345).

³ Playlists must be in M3U format (*.m3u) and be named Ford1, Ford2, ... up to Ford10.

⁴ Folders on the USB storage device must be named Ford1, Ford2, ... up to Ford10.












An overview of all speech commands: “External device (USB)”

FUNCTIONS		SPEECH DIALOGUE								
For each command, press the VOICE button and wait for the system answer “beep”		ACTION								
			Your speech command	System answer	Your speech command	System answer	Your speech command	System answer	Your speech command	System answer
Shuffle folder Use this command to activate shuffle for a folder.	“BEEP”	“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“USB”	“USB”	“SHUFFLE FOLDER”				
Shuffle playlist Use this command to activate shuffle for a playlist.		“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“USB”	“USB”	“SHUFFLE PLAYLIST”				
Shuffle off Use this command to deactivate shuffle.		“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“USB”	“USB”	“SHUFFLE OFF”				



An overview of all speech commands: “External device (iPod)”

FUNCTIONS		ACTION	SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep”			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
iPod help function Here, you can listen to a list of important commands at any time.		VOICE BUTTON/“BEEP”	“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“HELP”	“(list of possible speech commands)”		
iPod playback Use this command to select the iPod as an active audio source and start playback.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“PLAY”			
iPod track Use this command for direct selection of tracks from your iPod track lists.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“TRACK” ¹	“TRACK NUMBER PLEASE”	“(Integer 1 to 99)” ²	“TRACK (number)”
iPod playlist³ Use this command for direct selection of playlists from the iPod.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“PLAYLIST”	“PLAYLIST NUMBER PLEASE”	“(Integer 1 to 10)”	“PLAYLIST (number)”
Repeat track⁴ Use this command to repeat a played track.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“REPEAT TRACK”			
Repeat off Use this command to deactivate the repeat function.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“REPEAT OFF”			
Shuffle all Use this command to activate shuffle.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“SHUFFLE ALL”			
Shuffle playlist Use this command to activate shuffle for a playlist.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“SHUFFLE PLAYLIST”			
Shuffle off Use this command to deactivate shuffle.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“IPOD”	“IPOD”	“SHUFFLE OFF”			

¹ Can be used as a direct command.










² Or an integer of 100 to 65535 in single figures (e.g. “3”, “4”, “5” for track 345).

³ Playlists must be named Ford1, Ford2, ... up to Ford10.

⁴ When repeat is activated, the track is played from the start with the Skip Forward/Back button.



An overview of all speech commands: “External device (Bluetooth/line in)”

FUNCTIONS		SPEECH DIALOGUE								
For each command, press the VOICE button and wait for the system answer “beep”		ACTION								
			Your speech command	System answer	Your speech command	System answer	Your speech command	System answer	Your speech command	System answer
Bluetooth help function Here, you can listen to a list of important commands at any time.	VOICE BUTTON/“BEEP”		“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“BLUETOOTH”	“BLUETOOTH”	“HELP”	“(list of possible speech commands)”		
Bluetooth playback Use this command to select a Bluetooth mobile as an active audio source and start playback.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“BLUETOOTH”	“BLUETOOTH”	“PLAY”			
Repeat track Use this command to repeat a played track.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“BLUETOOTH”	“BLUETOOTH”	“REPEAT TRACK”			
Repeat off Use this command to deactivate the repeat function.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“BLUETOOTH”	“BLUETOOTH”	“REPEAT OFF”			
Shuffle all Use this command to activate shuffle.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“BLUETOOTH”	“BLUETOOTH”	“SHUFFLE ALL”			
Shuffle off Use this command to deactivate shuffle.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“BLUETOOTH”	“BLUETOOTH”	“SHUFFLE OFF”			
Line in Use this command to select a line in as an active audio source.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“LINE IN”	“LINE IN”				
Help function Here, you can listen to a list of important commands at any time.			“EXTERNAL DEVICE”	“EXTERNAL DEVICE”	“HELP”	“(list of possible speech commands)”				



An overview of all speech commands: “Climate“

FUNCTIONS		ACTION	SPEECH DIALOGUE							
For each command, press the VOICE button and wait for the system answer “beep“			 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer	 Your speech command	 System answer
Help function Here, you can listen to a list of important commands at any time.		VOICE BUTTON/“BEEP“	“CLIMATE“	“CLIMATE“	“HELP“	“(list of possible speech commands)“				
Temperature Use this function to set the temperature.			“CLIMATE“	“CLIMATE“	“TEMPERATURE“ ¹	“TEMPERATURE PLEASE“	“(number 15.5 to 28.5°C with 0.5 resolution)“ or “MINIMUM“ or “MAXIMUM“	“TEMPERATURE (number)“ or “TEMPERATURE MINIMUM“ or “TEMPERATURE MAXIMUM“		
Fan Use this function to set the fan speed.			“CLIMATE“	“CLIMATE“	“FAN“	“FAN SPEED PLEASE“	“(Integer from 1 to 7)“ or “MINIMUM“ or “MAXIMUM“	“FAN SPEED (number)“ or “FAN SPEED MINIMUM“ or “FAN SPEED MAXIMUM“		
Defrosting/demisting on			“CLIMATE“	“CLIMATE“	“DEFROSTING ON/ DEMISTING ON“ ¹	“DEFROSTING ON/ DEMISTING ON“				
Defrosting/demisting off			“CLIMATE“	“CLIMATE“	“DEFROSTING OFF/ DEMISTING OFF“ ¹	“DEFROSTING OFF/ DEMISTING OFF“				
Auto mode Use this command to set the climate function to automatic mode. This can be deactivated by selecting a different fan speed or selecting Defrosting/ Demisting.			“CLIMATE“	“CLIMATE“	“AUTO MODE“ ¹	“AUTO MODE“				

¹ Can be used as a direct command.